



**DL-AC-FLEX-HW-ODF • INFINA**

Linear Strip  
AC Flexible Linear Strip




## OUTDOOR HARDWIRE INSTALLATION INSTRUCTIONS

Please read and save these instructions. Read carefully before using product. Protect yourself and others by observing all safety information, warnings and cautions. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please retain instruction sheet for future reference.

**DO NOT CUT OR SHORTEN INFINA. DOING SO CAN CAUSE RISK OF ELECTRICAL SHOCK.**

### ! IMPORTANT SAFETY INSTRUCTIONS !

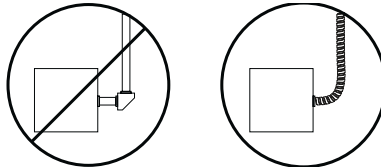






**FLEXIBLE CONDUIT ONLY**

Read completely before beginning. If you feel you do not have adequate electrical wiring experience, have this installed by a qualified licensed electrician.

All electrical connections must be in accordance with local codes, ordinances and the National Electric Code. This product operates on 120 VAC; always confirm the maximum wattage of the linear strip does not exceed the maximum wattage of the circuit it is connected to. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.

- Do not cover this product as the covering may cause the flexible light to overheat and melt or ignite.
- Do not operate with the flexible light tightly coiled.
- Do not puncture, cut, shorten, or splice the flexible lighting.
- Do not route the cord or flexible lighting cable through walls, doors, windows or any like part of the building structure.
- Do not use if there is any damage to the light or cord insulation. Inspect periodically.
- Do not submerge flexible light in liquids, or use the product in the vicinity of standing water or other liquids.
- Secure this flexible light using only hangers or clips provided. Do not secure this product with staples, nails, or like means that may damage the insulation or permanently attach to the building structure.
- Do not subject flexible lighting to continuous flexing.
- Do not Exceed The Length in Feet Permitted By The Marking.

1. Read and follow all safety instructions.
2. Read completely before beginning. If you feel you do not have adequate electrical wiring experience, have this installed by a qualified licensed electrician.
3. All electrical connections must be in accordance with local codes, ordinances and the National Electric Code. This product operates on 120 VAC; always confirm the maximum wattage of the linear strip does not exceed the maximum wattage of the circuit it is connected to. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
4. Do not install the linear strip if any damage is seen on the product or power cables.
5. Prior to starting the installation, disconnect the power by turning off the circuit breaker or removing the appropriate fuse. (Turning off power using the light switch is not sufficient to prevent electrical shock).

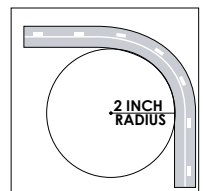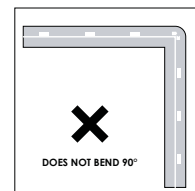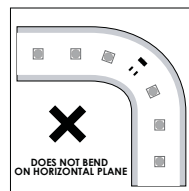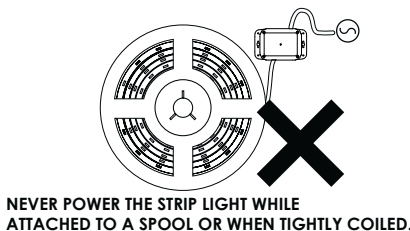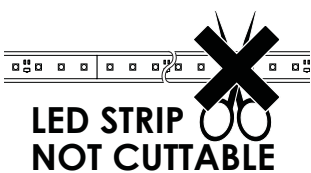

www.jescocolighting.com  
support@jescocolighting.com  
Tech Support: 855.592.0029

15 Harbor Park Drive  
Port Washington, NY 11050  
Main Line: 800.527.7796  
Fax Line: 855.265.5768

219 South 6th Ave  
City of Industry, CA 91746  
Main Line: 855.654.0110  
Fax Line: 626.333.2955



# DL-AC-FLEX-HW-ODF • INFINA

Linear Strip  
AC Flexible Linear Strip

 


## MOUNTING OPTIONS




Per UL safety requirements, two DL-AC-FLEX-MC-HW mounting clips must be used in mounting at the beginning and the end of each section of DL-AC-FLEX in a run.


		INCLUDED DL-AC-FLEX-MC-HW Required 2 per section
--	--	--




2x DL-AC-FLEX-MC-HW (Provided)  
+  
DL-AC-FLEX-CHX

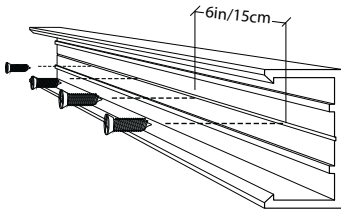

 
Secure channel on wall or other surfaces with self-tapping screws every 6 inches.  
**NOTE:** 2 hardwire clips (provided) must be used to secure the beginning and the end of each section of DL-AC-FLEX.




2x DL-AC-FLEX-MC-HW (Provided)  
+  
DL-AC-FLEX-MC-HW

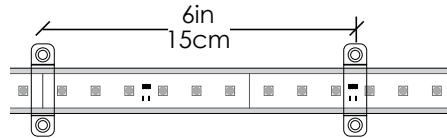

 Secure hardwire clips on DL-AC-FLEX with self-tapping screws. To prevent sagging on face-down application, we recommend to install hardwire clips 6" (15cm) apart.  
**NOTE:** 2 hardwire clips (provided) must be used to secure the beginning and the end of each section of DL-AC-FLEX.




2x DL-AC-FLEX-MC-HW (Provided)  
+  
DL-AC-FLEX-MC | DL-AC-FLEX-MC-M

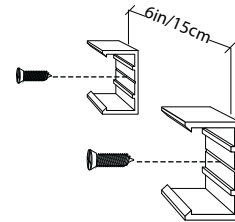


Secure mounting U clips on wall or other surfaces with self-tapping screws every 6 inches.  
**NOTE:** 2 hardwire clips (provided) must be used to secure the beginning and the end of each section of DL-AC-FLEX.

Illustration is a representation of three sections of DL-AC-FLEX in one run using methods A, B & C (not to scale, not for installation)

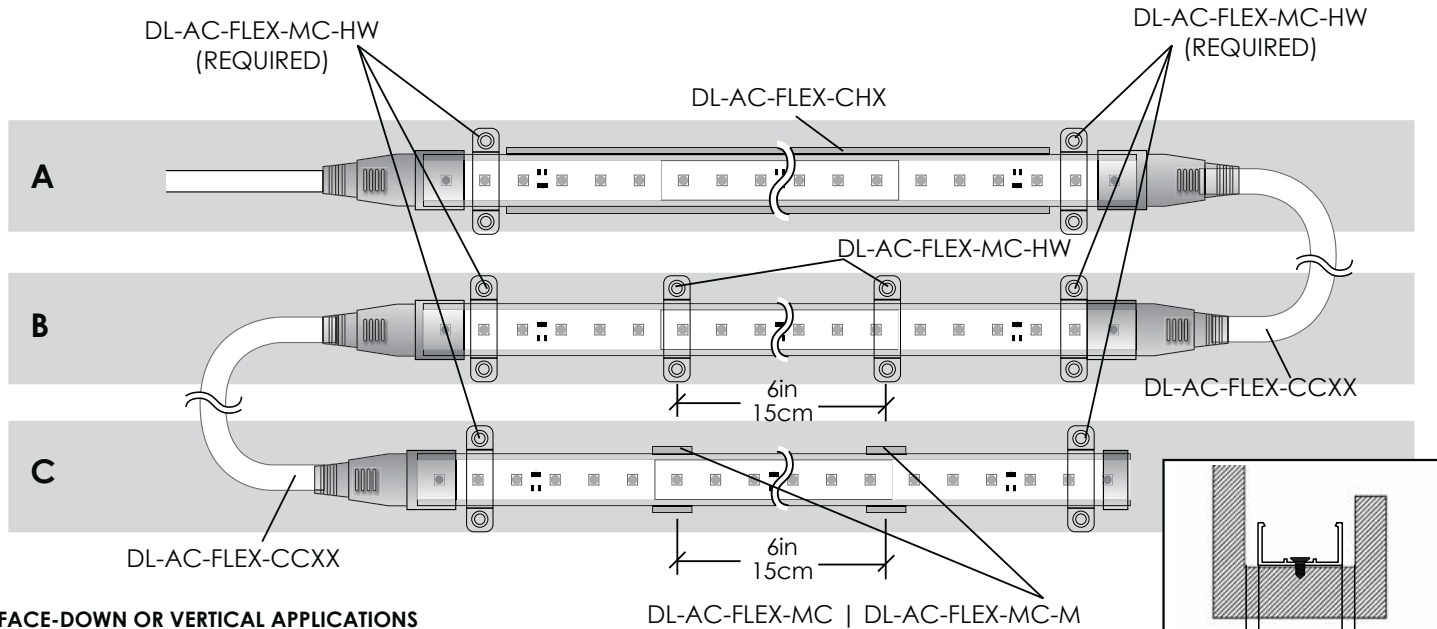

**FACE-DOWN OR VERTICAL APPLICATIONS**  
Mounting option (A) with channel is recommended.

**FACE-UP OR HORIZONTAL APPLICATIONS**  
Mounting option (A)(B)&(C) are all appropriate.

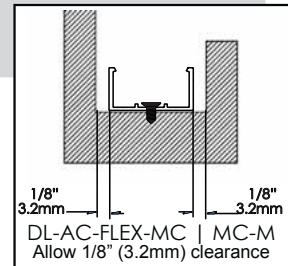

www.jescocolighting.com  
support@jescocolighting.com  
Tech Support: 855.592.0029

15 Harbor Park Drive  
Port Washington, NY 11050  
Main Line: 800.527.7796  
Fax Line: 855.265.5768

219 South 6th Ave  
City of Industry, CA 91746  
Main Line: 855.654.0110  
Fax Line: 626.333.2955



# DL-AC-FLEX-HW-ODF • INFINA

Linear Strip  
AC Flexible Linear Strip




## INSTALLING DL-AC-FLEX-HW-ODF



### TURN OFF ELECTRICITY



at main fuse box (or circuit breaker box) before beginning installation by switching circuit breaker off or removing fuse.

MIN 90° C SUPPLY CONDUCTORS.

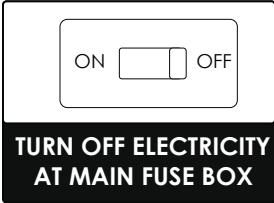


### CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT

NOTE: ALL CONNECTIONS MUST BE PROPERLY SECURED AND SEALED FOR OUTDOOR INSTALLATIONS.

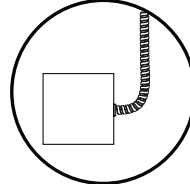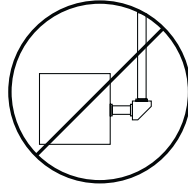


FLEXIBLE CONDUIT ONLY FOR INPUT AND OUTPUT

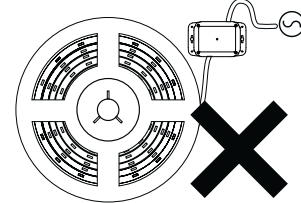

NEVER POWER THE STRIP LIGHT WHILE ATTACHED TO A SPOOL OR WHEN TIGHTLY COILED.


### REQUIRED PARTS FOR INSTALLATION

**DL-AC-FLEX-HW-ODF (Included)**

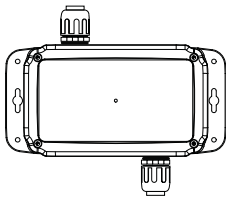

NEMA 4X RATED ENCLOSURE WITH SURGE PROTECTOR AND CONNECTIONS TO 1/2"Ø NON-METALLIC FLEXIBLE CONDUIT

**DL-AC-FLEX-HW-ODF-CONN (Included)**

 

COUPLER  
1/2" LIQUID-TIGHT FLEXIBLE CONDUIT CONNECTOR TO 1/2" LIQUID-TIGHT CORD GRIP CONNECTOR


**LIQUID-TIGHT NONMETALLIC FLEXIBLE CODUIT (Not Included)**




1/2" NON-METALLIC LIQUID-TIGHT FLEXIBLE CONDUIT  
MUST BE UL, ETL OR CSA APPROVED

**REQUIRED FOR INPUT AND OUTPUT CONNECTION**

**WIRE NUTS (Not Included)**

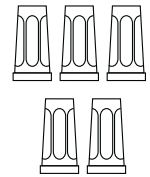

### TYPICAL INSTALLATION

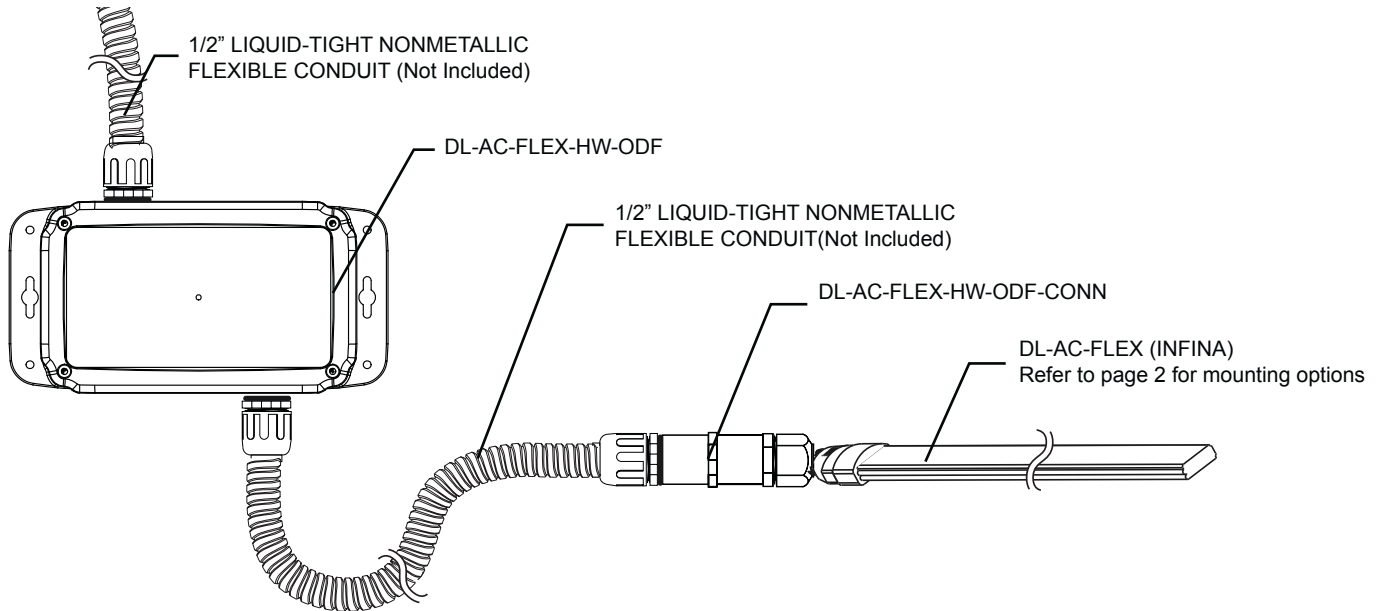

www.jescolighting.com  
support@jescolighting.com  
Tech Support: 855.592.0029

15 Harbor Park Drive  
Port Washington, NY 11050  
Main Line: 800.527.7796  
Fax Line: 855.265.5768

219 South 6th Ave  
City of Industry, CA 91746  
Main Line: 855.654.0110  
Fax Line: 626.333.2955



# DL-AC-FLEX-HW-ODF • INFINA

Linear Strip  
AC Flexible Linear Strip



## INSTALLING DL-AC-FLEX-HW-ODF




### TURN OFF ELECTRICITY

at main fuse box (or circuit breaker box) before beginning installation by switching circuit breaker off or removing fuse.

MIN 90° C SUPPLY CONDUCTORS.



**CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT**

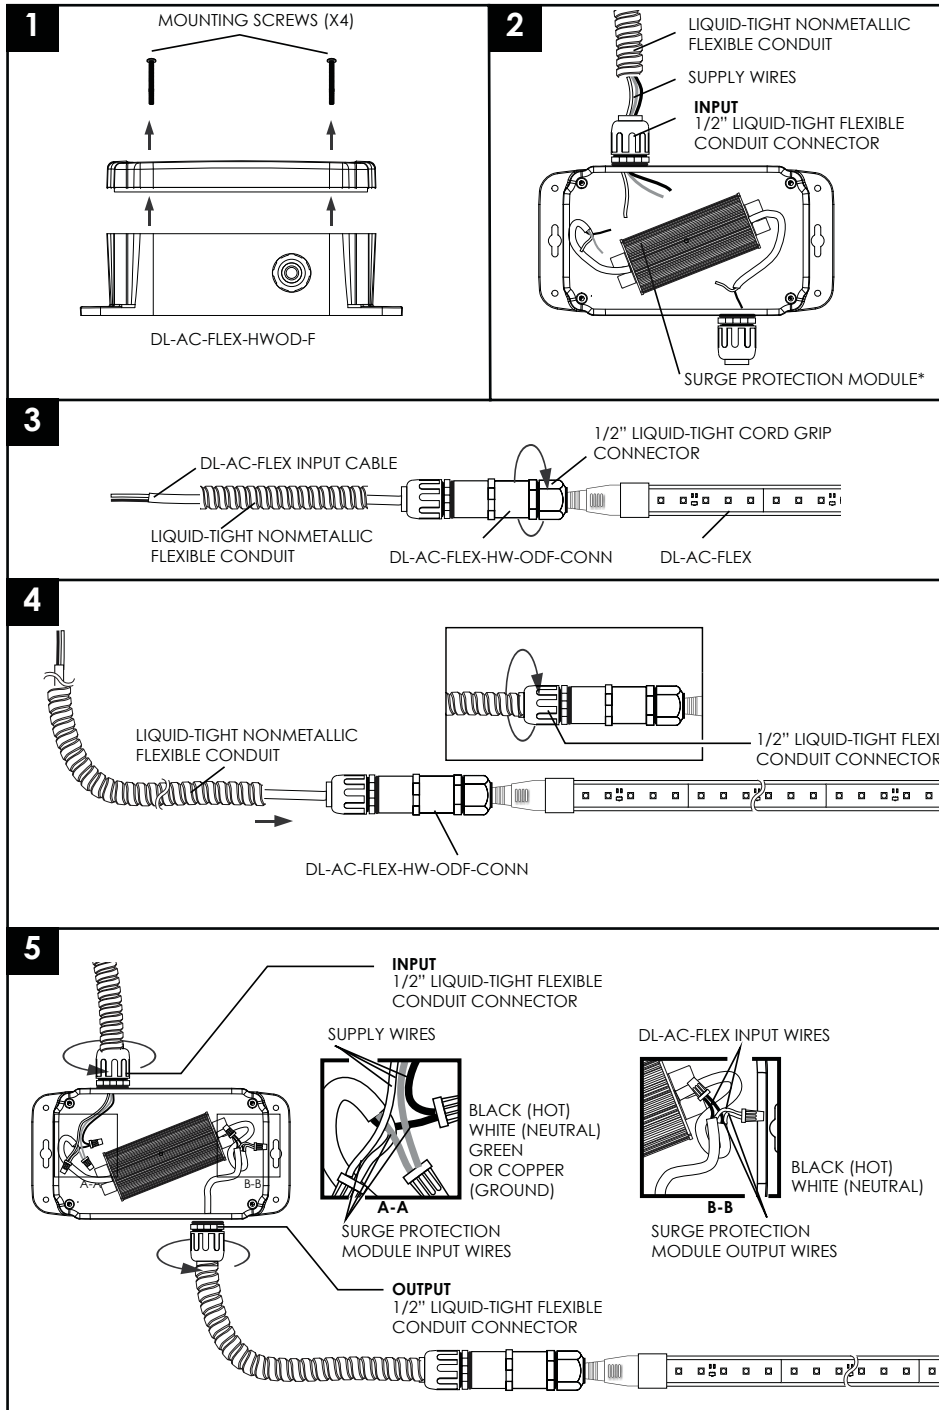

**\*DO NOT REMOVE SURGE PROTECTION MODULE**  
Doing so is in direct violation to UL requirements and will void the warranty of the product.

**1** Unscrew and remove mounting screws and remove lid from DL-AC-FLEX-HW-ODF, save for later use.

**2** Feed supply wires and liquid-tight non metallic flexible conduit to INPUT 1/2" liquid-tight flexible conduit connector (pre-measure and cut flexible conduit to desired length).

**3** Feed DL-AC-FLEX input cable through DL-AC-FLEX-HWF-CONN followed by a 1/2" liquid-tight nonmetallic flexible conduit. Secure DL-AC-FLEX-HW-ODF-CONN onto DL-AC-FLEX by tightening the 1/2" liquid-tight cord grip connector.

**4** Insert liquid-tight nonmetallic flexible conduit into DL-AC-FLEX-HW-ODF-CONN. Tighten 1/2" liquid-tight flexible conduit connector to secure.

**5 A-A**  
1. Connect hot supply wire (black) to surge protection module's hot input wire (black).  
2. Connect neutral supply wire to (white) surge protection module's neutral input wire (white).  
3. Connect supply ground wire (green or bare copper) to surge protection module's ground input wire (green).  
Secure all connections with wire nuts (not included).

**5 B-B**  
1. Connect surge protection module's hot output wire (black) to DL-AC-FLEX's hot input wire (black).  
2. Connect surge protection module's neutral output wire (white) to DL-AC-FLEX's neutral input wire (white).

**5** Carefully tuck all connected wires inside DL-AC-FLEX-HW-ODF. Secure lid to DL-AC-FLEX-HW-ODF with 4 mounting screws, making sure to not pinch any wires or wire nuts.

**NOTE: ALL CONNECTIONS MUST BE PROPERLY SEURED AND SEALED FOR OUTDOOR INSTALLATIONS.**



www.jescocolighting.com  
support@jescocolighting.com  
Tech Support: 855.592.0029

15 Harbor Park Drive  
Port Washington, NY 11050  
Main Line: 800.527.7796  
Fax Line: 855.265.5768

219 South 6th Ave  
City of Industry, CA 91746  
Main Line: 855.654.0110  
Fax Line: 626.333.2955