



LED DOWNLIGHT LIGHT ENGINE INSTALLATION INSTRUCTIONS

⚠ WARNING- Risk of fire or electric shock.

1. Risk of Fire - Supply conductors (power wires) connecting the fixture must be rated minimum 194°F. If uncertain consult an electrician.
2. Risk of Electric Shock - Disconnect power at fuse or circuit breaker before installing or servicing.
3. Risk of Fire/Electric Shock - If not qualified, consult an electrician.
4. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

Installation into Recessed Housing

1. Turn power off at fuse or circuit breaker box.
2. Align orange quick connects from Light Engine with quick connects from housing and snap them together.
3. Snap the two halves of the metal connector case together.
4. Tuck flexible conduit whip into the housing and carefully push the driver and connection box into existing housing. (Fig. 1)
5. Carefully push the light engine / reflector assembly into housing until trim is flush with the ceiling. (Fig. 1)
6. Turn power back on.

Figure 1

